

CLUTCH

2.13. RIFF 53

GTE
?
→

DESCRIPTION

- 250GT - 8-3/4" Diameter Fitchel & Sachs, part no. 1861-084-002
- 330GT2+2 - 9.5" Diameter Textar, part number 505/17
- 330GTC - 9.5" Diameter Borg & Beck
- 365GTB/4 - 10-1/2" Diameter Borg & Beck, part number BB9/445A

MAINTENANCE

- Every 500 miles - Check free play.
- Every 1,000 miles - Adjust linkage and pedal free play.
- Every 2,000 miles - Grease linkage.
- Every 5,000 miles - Bleed brake fluid if hydraulic actuated type.
- Every 10,000 miles - Check disc and pressure plate for damage or wear.
- Every 15,000 miles - Rebuild hydraulic cylinder.
- 20,000 miles - Replace clutch disc.
- 20,000 miles - Recondition flywheel and pressure plate.
- 20,000 miles - Replace throw out bearing.

ADJUSTMENT

- Pedal free play - 1/3/8" to 1-9/16"
- Pressure plate finger clearance - 3mm
- Actuating arm angle - 10°

PRECAUTIONS

- Do not disengage the clutch rapidly when vehicle is at rest.
- Do not rest foot on clutch pedal while driving.
- Do not keep clutch disengaged for long periods of time.
- Do not tow trailers or push other vehicles.

RIFF-53