
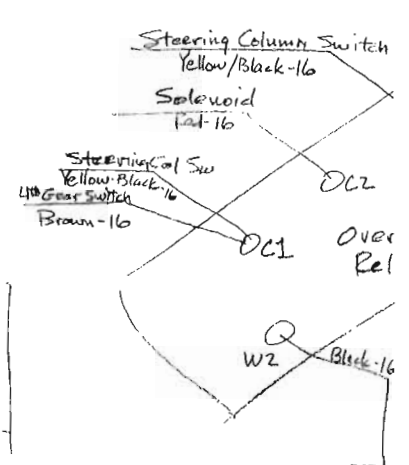
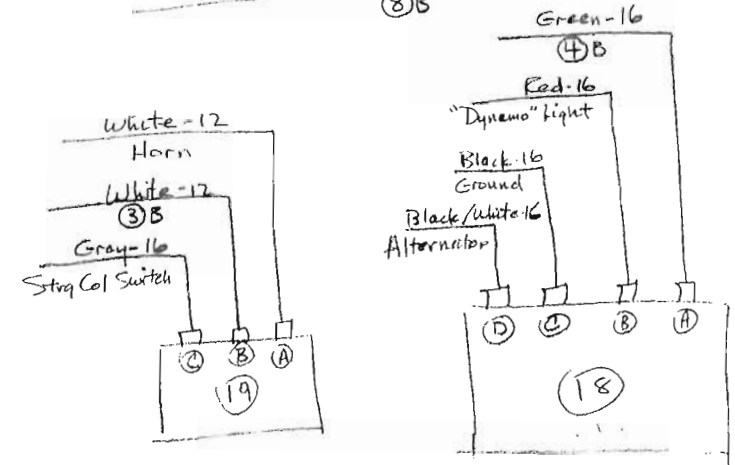
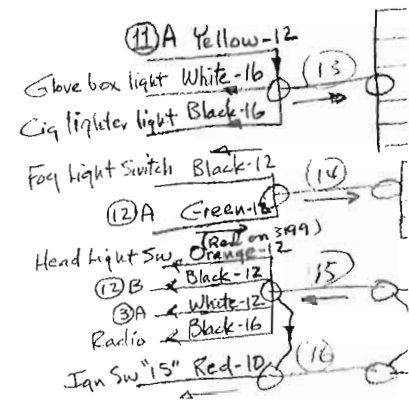
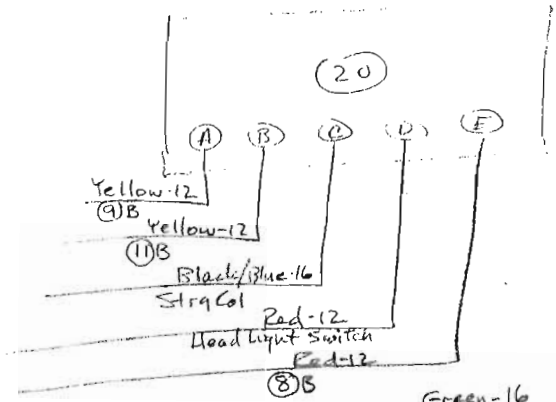
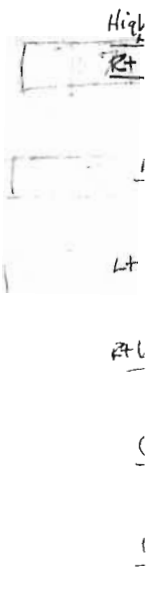
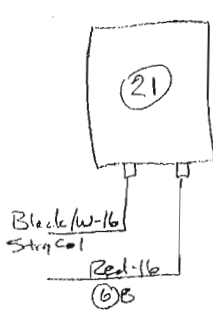


6.41.Dwf-1

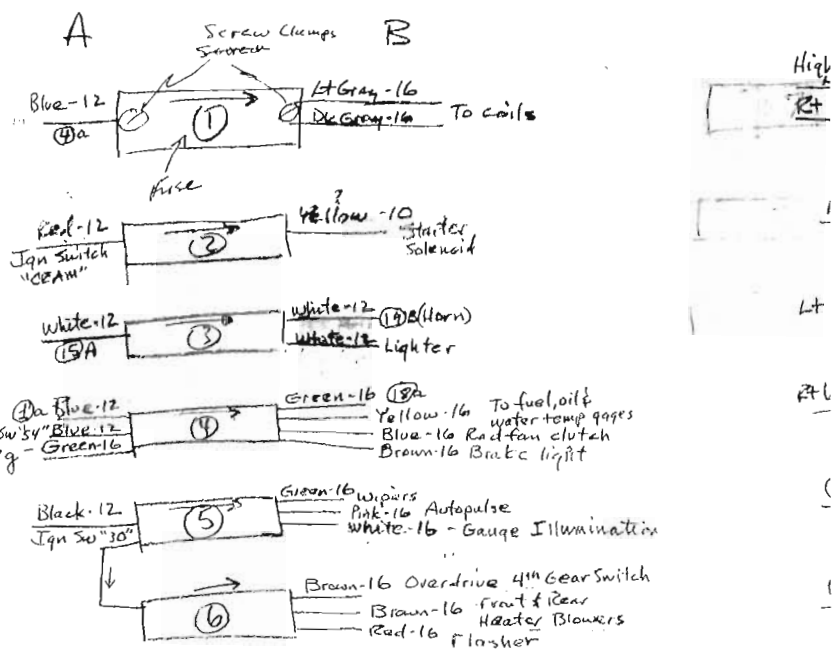

FERRARI MAIN PLUG TO FUSE PANEL WIRES

AS	14B	GREEN-16	TO "I" SW
AT	14B	GREEN-16	TO INT LTS
AU	14B	GREEN-16	TO INT LTS ALSO
AV	14B	GREEN-16	DOME/RV MIRROR LTS
BS	05B	WHITE-16	PNL LT SW
BV	11B	YELLOW-12	HD LT SW
BW	13B	PURP-16 LOOKS GRAY	UNDERHOOD LT
BX	13B	WHITE-16	IND LT "LTS" BT SPDO
BY	13B	BLACK-13	TAILLIGHTS
BZ	14B	WHITE-16	CLOCK
CS	04B	BROWN-16	BRAKE LT & SW
CT	19C	GRAY-16	HORN STRG COL GRND
CU	06B	BROWN-16	AUTOPULSE SW FRT & RR BLOWER MOTORS
CX	16A	RED-12	IGN SW 15
CZ	13A	WHITE-16	EXTRA HOT LEAD
DS	03B	WHITE-12	CIG LTR
DU	05B	PINK-16	RR BLR MTR SW BLUE FUEL PUMP
DX	17C1	YELLOW/BLACK-16	O/D TO STRG COL
DY	14A	BLACK-12	FOG LT SW
DZ	15A	ORANGE-12	HD-PK LT SW
ES	02A	RED-12	IGN SW CEAM
ET	04A	BLUE-12	IGN SW 54
EU	05A	BLACK-10	IGN SW 30
EV	04A	GREEN-16	VOLT REG
EW	13A	BLACK-16	CIG LTR LT
EX	17W1	YELLOW/BLACK-16	O/D TO STRG COL
EZ	15A	BLACK-16	RADIO
FU	20D	RED-12	HD LT SW
FV	21A	BLACK/WHITE-16	FLASHER
FW	04B	YELLOW-16	FUEL OT WT GAGES
FX	07A	RED/BLACK-16	HI BEAM IND LT
FY	20C	BLUE/BLACK-16	HD LT TO STRG COL
FZ	18B	RED-16	DYNAMO LT ON TACH

ES	02A	RED-12	IGN SW CEAM
DS	03B	WHITE-12	CIG LTR
ET	04A	BLUE-12	IGN SW 54
EV	04A	GREEN-16	VOLT REG
FW	04B	YELLOW-16	FUEL OT WT GAGES
CS	04B	BROWN-16	BRAKE LT & SW
EU	05A	BLACK-10	IGN SW 30
BS	05B	WHITE-16	PNL LT SW
DU	05B	PINK-16	RR BLR MTR SW
CU	06B	BROWN-16	AUTOPULSE SW
FX	07A	RED/BLACK-16	HI BEAM IND LT
BV	11B	YELLOW-12	HD LT SW
CZ	13A	WHITE-16	EXTRA HOT LEAD
EW	13A	BLACK-16	CIG LTR LT
BW	13B	PURP-16 LOOKS GRAY	UNDERHOOD LT
BY	13B	BLACK-13	TAILLIGHTS
DX	13B	WHITE-16	IND LT "LTS" BT SPDO
DY	14A	BLACK-12	FOG LT SW
AS	14B	GREEN-16	TO "I" SW
AU	14B	GREEN-16	TO INT LTS ALSO
AT	14B	GREEN-16	TO INT LTS
AV	14B	GREEN-16	DOME/RV MIRROR LTS
BZ	14B	WHITE-16	CLOCK
EZ	15A	BLACK-16	RADIO
DZ	15A	ORANGE-12	HD-PK LT SW
CX	16A	RED-12	IGN SW 15
DX	17C1	YELLOW/BLACK-16	O/D TO STRG COL
EX	17W1	YELLOW/BLACK-16	O/D TO STRG COL